 


Anypos50

User Manual

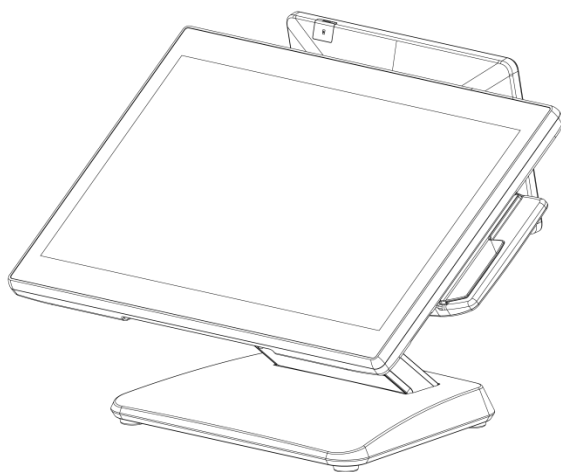

QINGDAO WINTEC SYSTEM CO., LTD


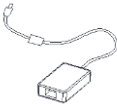


Thank you for purchasing our multi-functional Anypos50 terminal. This manual will help you to know the functions and operations of the Anypos50.

About theProduct

Anypos50 is a 14 inch and 8 inch integraltouch terminal,Both the main screen and the second screen can be rotated, havemulti-function card reader (Optional) ,Based on Intel Cherry Trail platform, it runs Windows10 OS. It is an ideal choice for retail, hospitality and entertainment business etc.


Packaging List

After unpacking the carton, please check that the following items are included: POS, Power Adapter, Power line,User Manual. If any item of them is missing or damaged, please contact your dealer immediately.

No.	Name	Outside View
1	POS	
2	Power Adapter	
3	Power line	
4	User Manual	


Outward Diagram

Front View

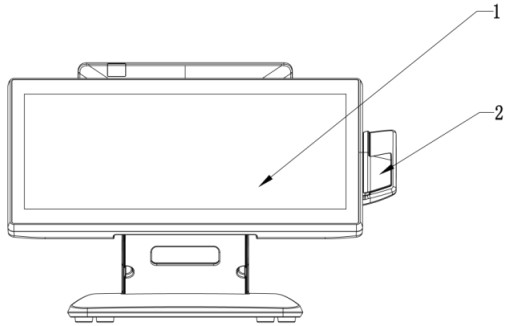


No.	DESCRIPTION
1	LCD, Touch screen
2	Multi-function Card Reader (Optional)

Side View

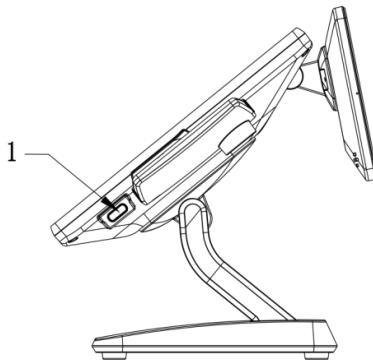


No.	DESCRIPTION
1	Power indicator light and button


 
 
BackView

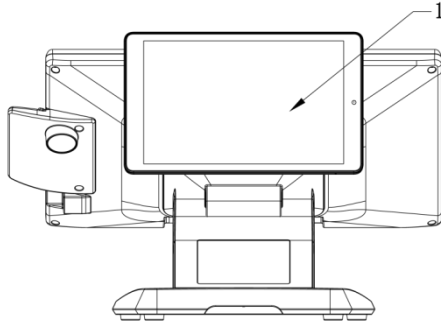

No.	DESCRIPTION
1	Customer display

IO Ports

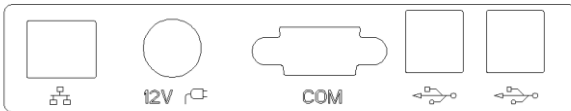

No.	DESCRIPTION	ICON
1	RJ-45 LAN port	
2	COM port	COM
3	Power input port	
4	USBport(1&2&3&4)	

Common Operations


Booting&Shutdown

After plug in the power adapter, wait for two seconds, until the button lights go out, then press the switch button, until the indicator light on again, release the button.

Trouble Shooting

A few common hardware problems and suggested solutions are presented in the table below:

No.	PROBLEM	SOLUTION
1	Can't turn on the machine.	① Check whether external power supply is normal and whether the power adapter is connected. ② Check that the indicator light is on.
2	The LCD screen is not clear	Set the screen resolution to 1366*768.
3	Unable to connect to the network	Make sure the LAN cable is OK. Check that the wire plug is properly installed.
4	System date is incorrect	Change the BIOS or system time and replace the battery if it is not valid

 **NOTE:** Please don't dismantle the machine without related guide. Please consult your supplier or service provider first if problem can't be solved.

Related technical materials can be download from <http://www.wintec.cn>